



Reference

## K9850D


**RANGE STARBOLT**

### Nomenclatures

<b>Kit</b>	<i>Manhole cover locking kit</i>			
<b>Piece</b>	Support & Cam	M8 set screw	M8 nut	Drilling template
<b>Quantity</b>	<b>x1</b>	<b>x2</b>	<b>x2</b>	<b>x1</b>
<b>Visual element</b>				

### Universal manhole cover kit - Assembly steps


**1.** Position the drilling template on the manhole cover and mark the location of the holes

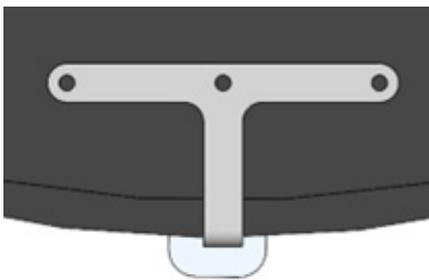


**2.** Drill the holes. The ones at the ends are to be drilled at Ø8mm and the central one at Ø14mm



**3.** Position the M8 set screws in the Ø8mm holes

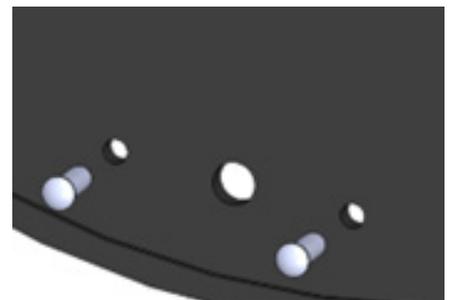

**4.** Adjust the positioning of the kit so that the screw is centered. Check from above that the screw is well positioned

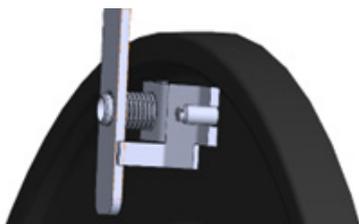

**5.** Tighten the M8 nuts and double-check the alignment when installing them.



**6.** Grind the concrete under the frame so that the cam can rotate

