


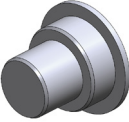
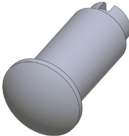






Reference

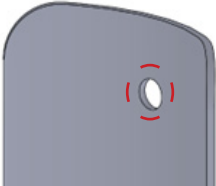
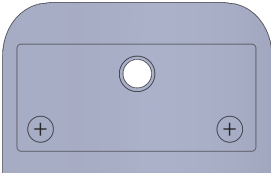
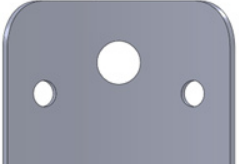
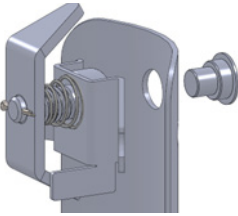
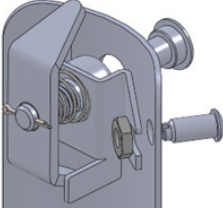
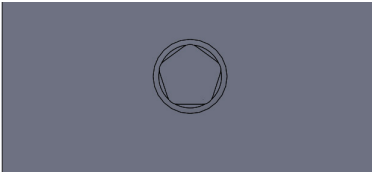
K1125A

RANGE STARBOLT

Nomenclatures

Kit	Door lock kit				Heel kit for door		
Piece	Support & Cam	Plot Centering	M8 set screw	M8 nut	Tab	M8 set screw	M8 nut
Quantity	x1	x1	x2	x2	x1	x1	x1
Visual element							

Door lock kit - Assembly steps

<p>1. Enlarge the top hole to Ø14mm</p> 	<p>2. Position the sticker over the Ø14mm hole</p> 	<p>3. Drill the two Ø8mm holes (pre-drill with a 4mm drill bit)</p> 
<p>4. Position the kit with the stud</p> 	<p>5. Secure the kit</p> 	<p>5. Check alignment of hole/screw</p> 

Reference K0040E - Door tab kit

<p>1. Percer Ø8mm si nécessaire</p> 	<p>2. Fixer le talon</p> 	<h3>Assembly Kit</h3> 
---	--	---